



## T-CLIP OPERATING INSTRUCTIONS

To use T-Clip, first check aluminum front slot width (8 or 10mm). Then place a standard item or a Tarifold PRO accessory on an aluminum profile, place the according insert (8 or 10mm), then push key into insert.

### 1. Use of the T-Clip with the Tarifold PRO accessories

Those accessories have been exclusively designed to be used with T-Clip



Wall display system

Ref. 920102 + 920101 + 920001 +924007




Cable-holder

Ref. 920210



Document holder

Ref. 920211

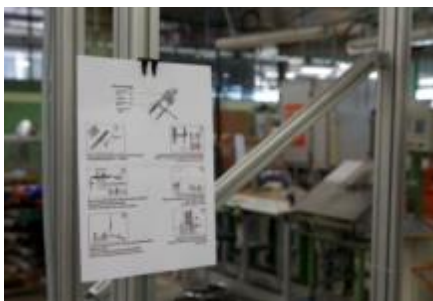

Magnetic holder

Ref. 920212



Magnetic holder

+ Easy Load display panel with metal rings

Ref.920212 + Ref. 924057:



Hook

Ref. 920213





## 2. Use of the T-Clip with standard items

Standard items such as switches, cable trays, small electrical boxes, etc. can be customized with a drilled 15 mm hole to allow T-Clip holding:

Example of customizing a switch and mounting with the T-Clip on an aluminum profile:



Example of customizing a cable tray and mounting with the T-Clip on an aluminum profile

